




Installation Guide for Easel Backs

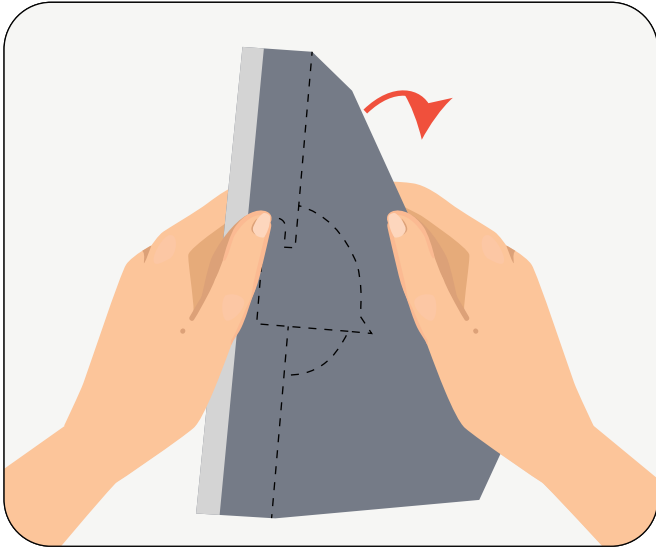


Step 1: Fold the wing of the easel back to open the pre-dotted area.

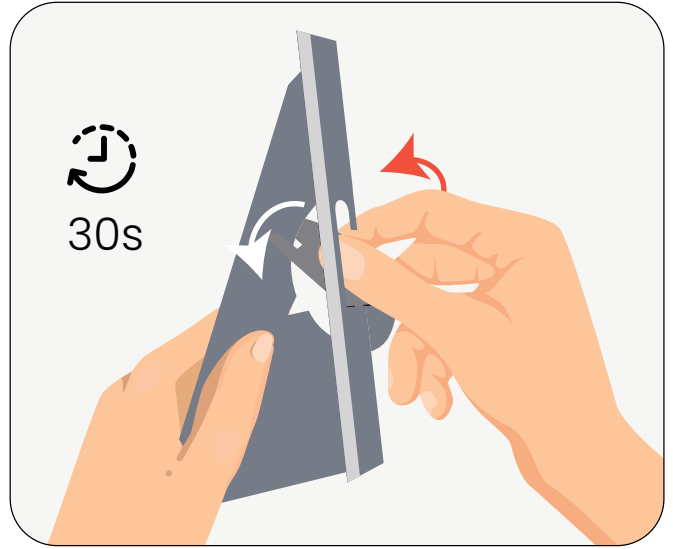

Step 2: Fold down the circular easel stabilizer to secure the wing in its slot.

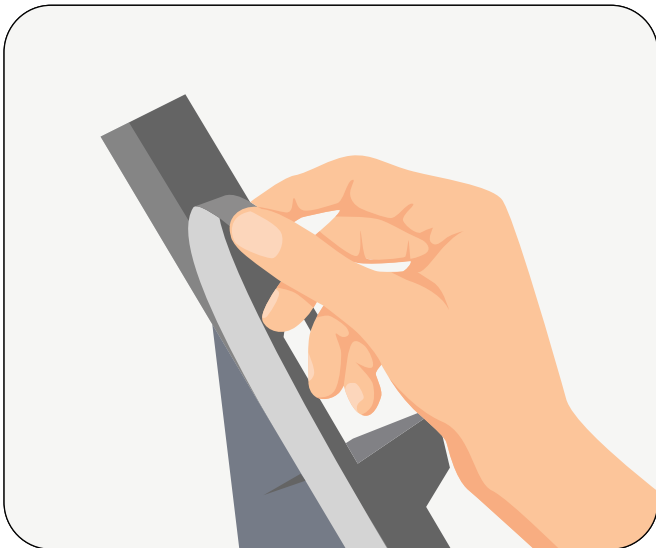

Step 3: Remove the tape from the adhesive parts of the easel back.

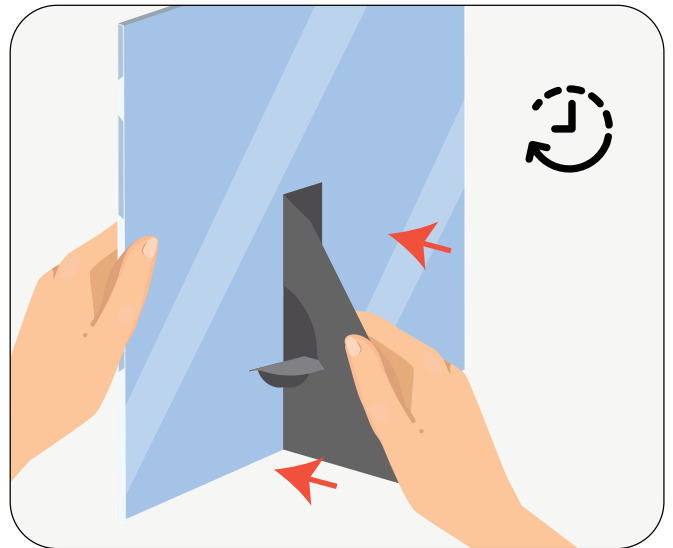

Step 4: Fix the easel back to the back of your product. Press it for a few seconds to make sure it's firmly bound.