




SET-UP STEPS

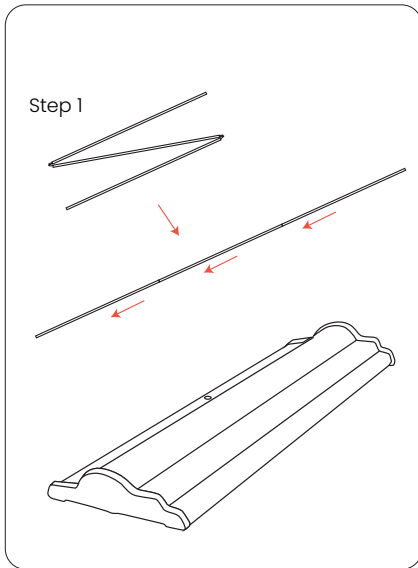

Step 1: Extend the pole.

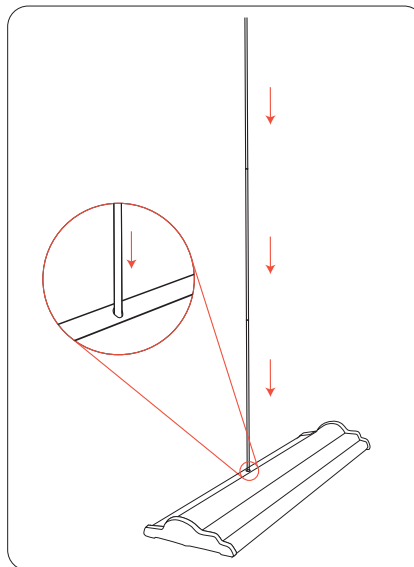


Step 2: Insert the pole into the hole at the back of the base.

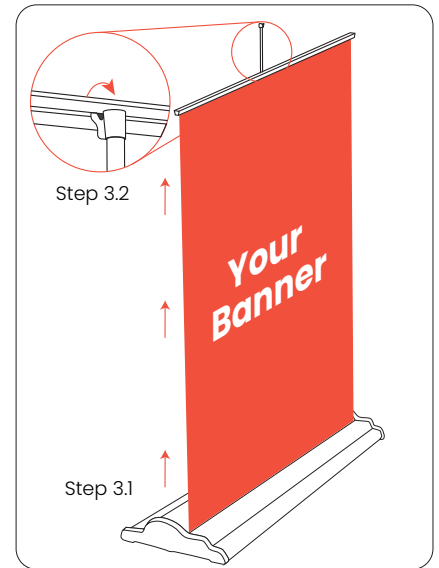


Step 3.1: Slowly pull the banner up from the base.
Step 3.2: Attach the header bar to the top of the pole.


PREMIUM RETRACTABLE BANNER REPLACEMENT STEPS

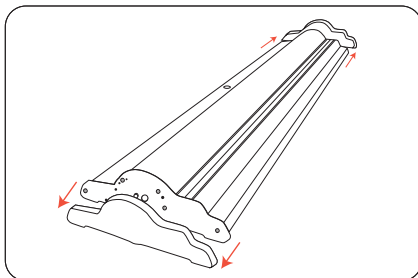


Step 1: Remove the side caps to access the locking pin.

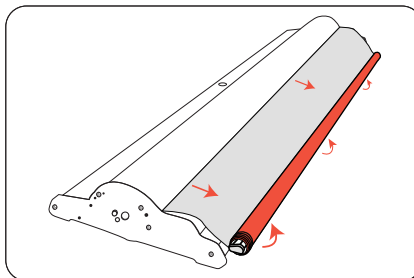


Step 2: Roll the banner up, keeping the top attachment piece on.

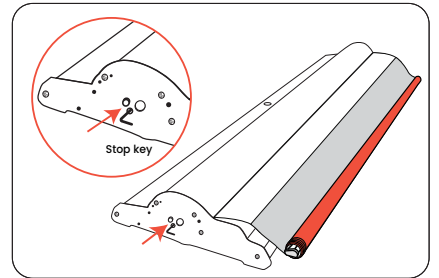


Step 3: Roll all the way to the leader piece and insert the locking pin.

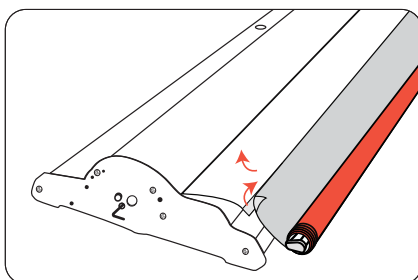


Step 4: Ensure the banner cannot roll back, then remove the old banner.

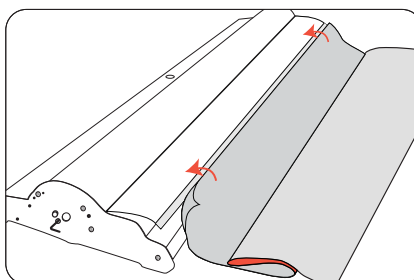


Step 4: Attach the new banner to the leader piece.

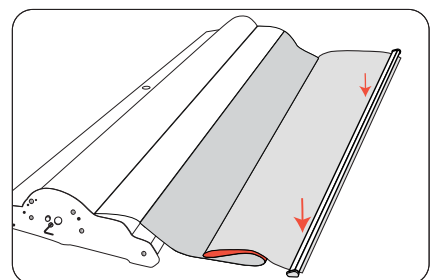

Step 4: Attach the top rail to the new banner.

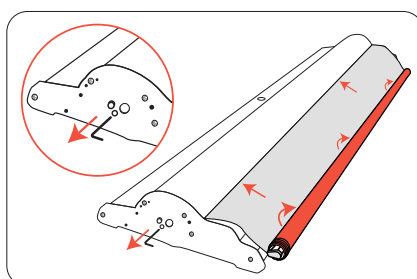

Step 7: Remove the locking pin and slowly let the new banner roll back into the stand.

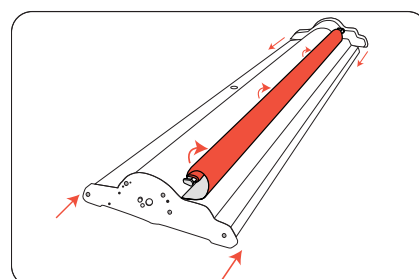

Step 8: Replace the side caps and locking pin to finish the installation.