SQUARE SIGNS

Installation by Wet Mounting

* Air and application surface temperature must be above 45°F and the humidity less than 90%.
* Put on gloves to make sure you don't leave your fingerprints on the adhesive part of the decals.

Step 1: Clean the surface with a damp non-abrasive cloth.

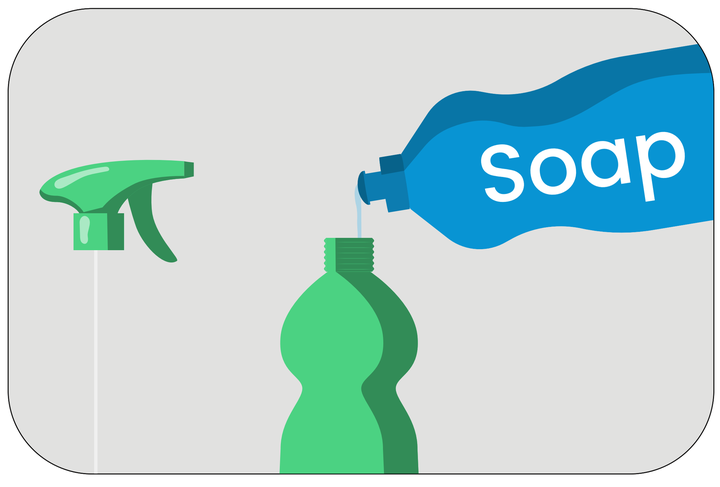

Step 2: Mix 2-4 drops of dish soap in 12 oz. of water.

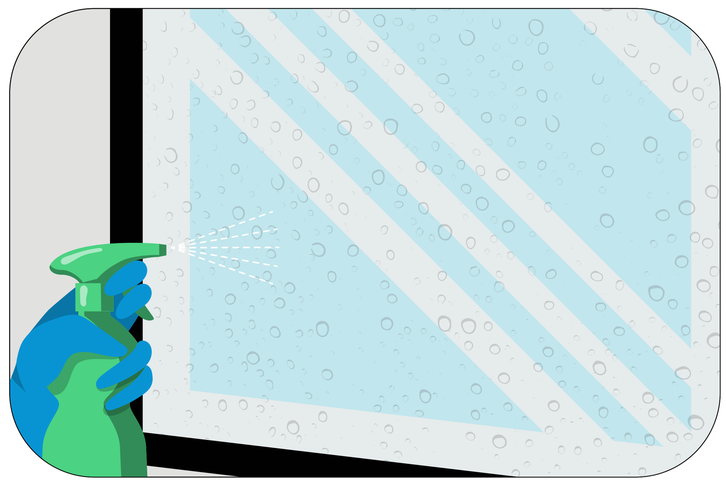

Step 3: Spray the soap water onto the application surface to make it wet.

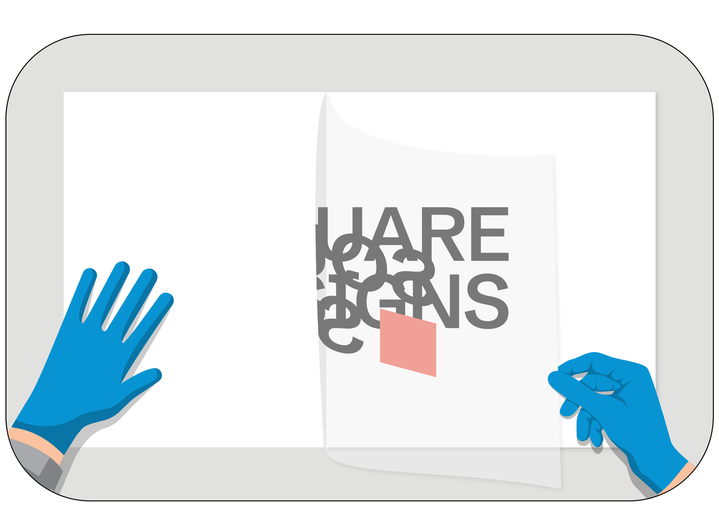

Step 4: Fully separate the backing paper from the decal.

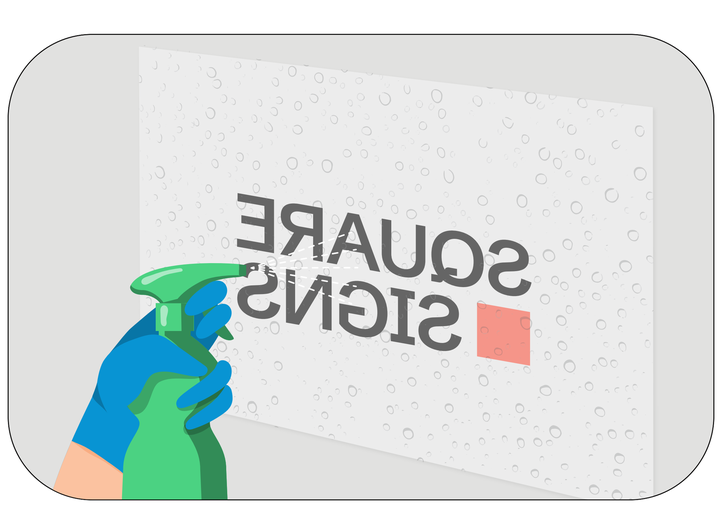

Step 5: Spray the same soap-water mixture on the decal's adhesive backing.

Step 6: Press the wet backing of the product against the surface.

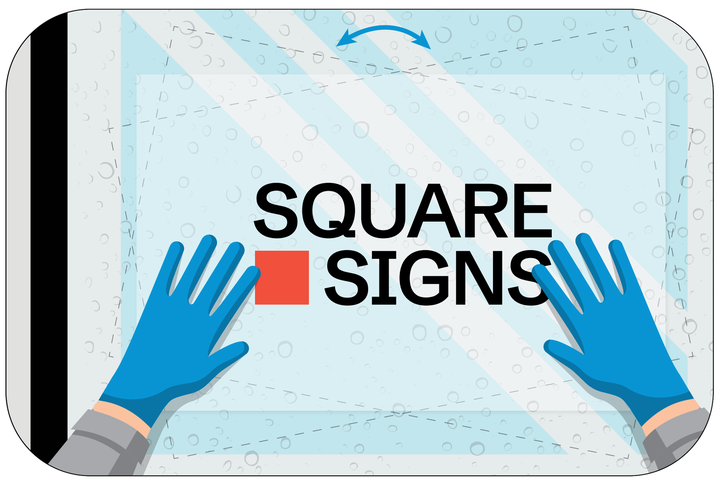

Step 7: Adjust its position to ensure it's level.

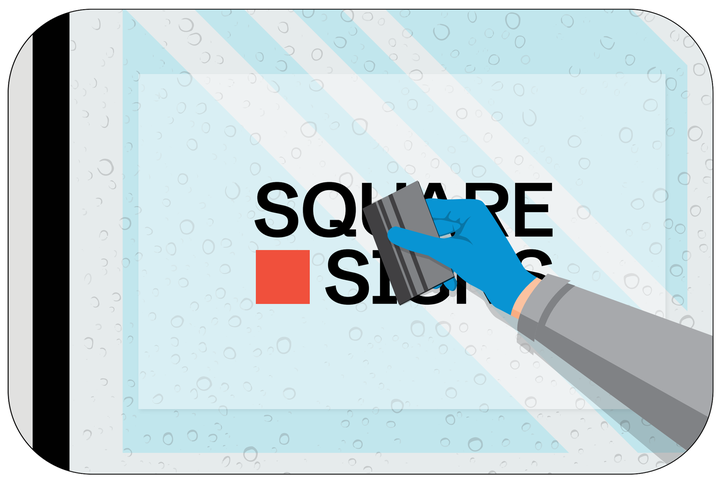

Step 8: Use a squeegee to remove the water from underneath the decal.

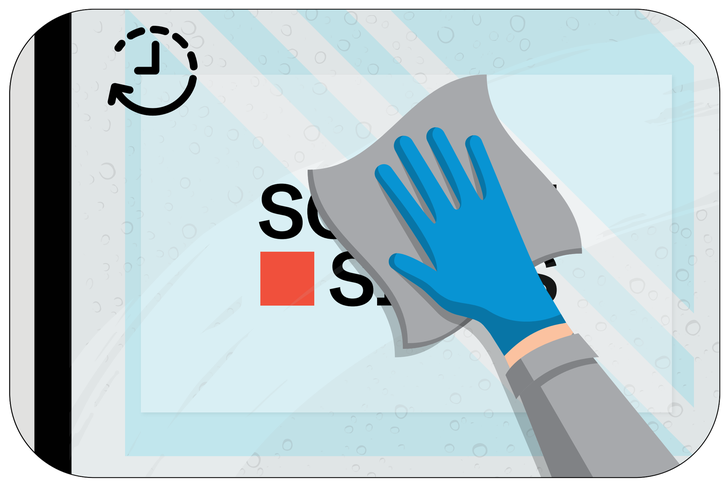

Step 9: Wipe the entire decal and surface dry.