




Curved Pop Up Displays Installation Guide

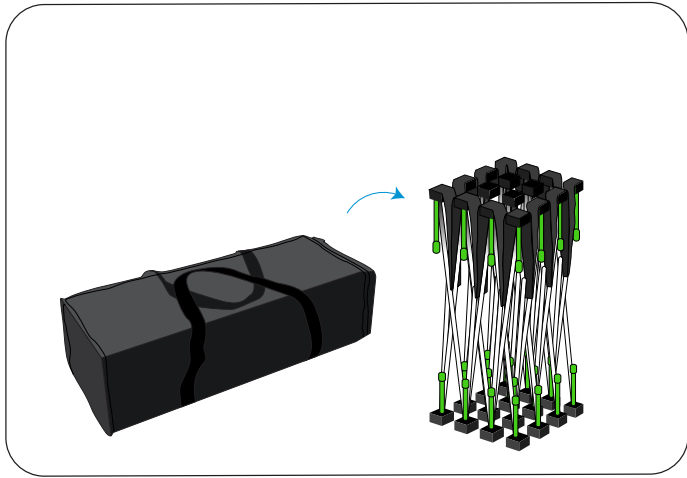


Step 1: Remove the frame from the carry bag.

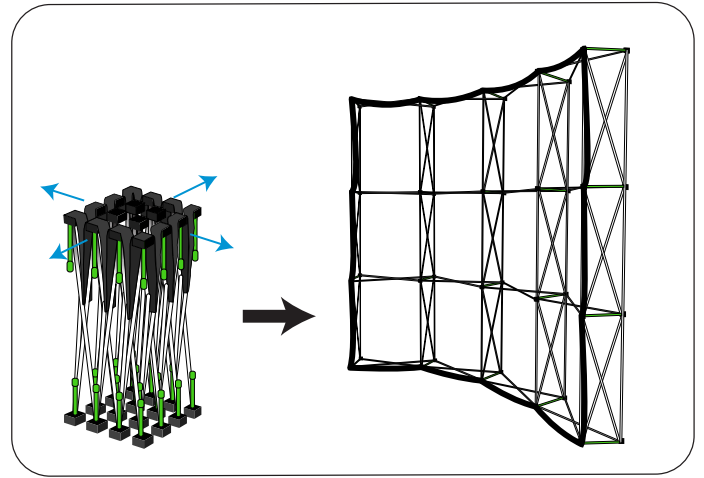


Step 2: Expand the frame by pulling on it until it snaps and locks into position.

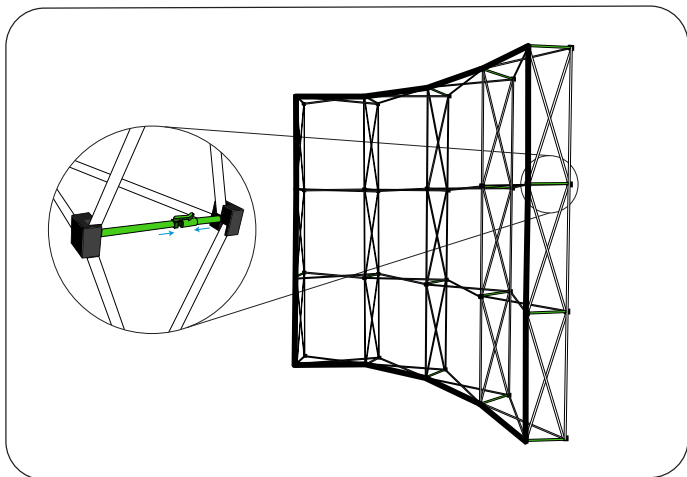

Step 3: Line up the black locking arms and green locking arms into place.

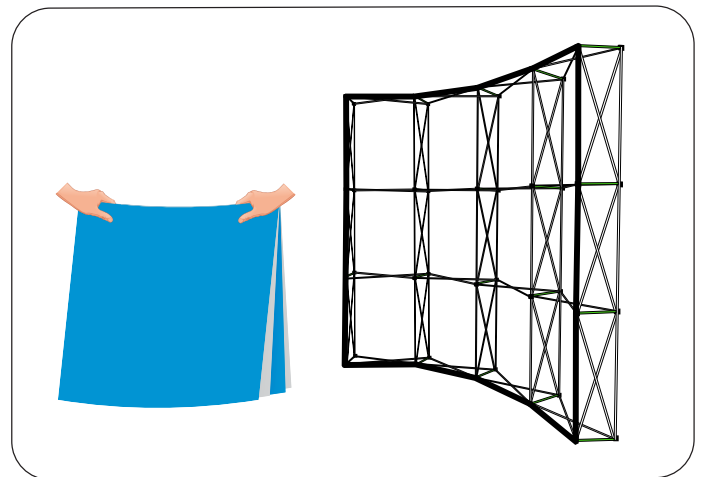

Step 4: Unroll the fabric.

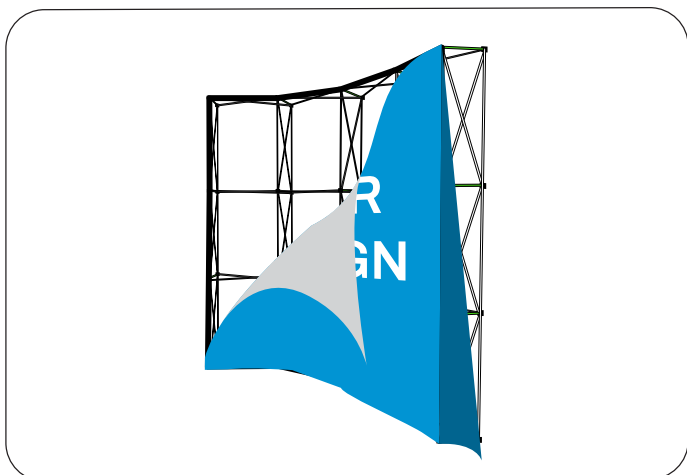

Step 5: Secure the fabric onto the bars with velcro. Begin in one corner and move on to the next corner.



Step 6: Pull the end caps down to the corner of the frame and attach. Repeat on the other corners and sides.