


Installation by Dry Mounting

* Air and application surface temperature must be above 45°F and the humidity less than 90%.




Step 1: Clean the surface with a damp non-abrasive cloth.

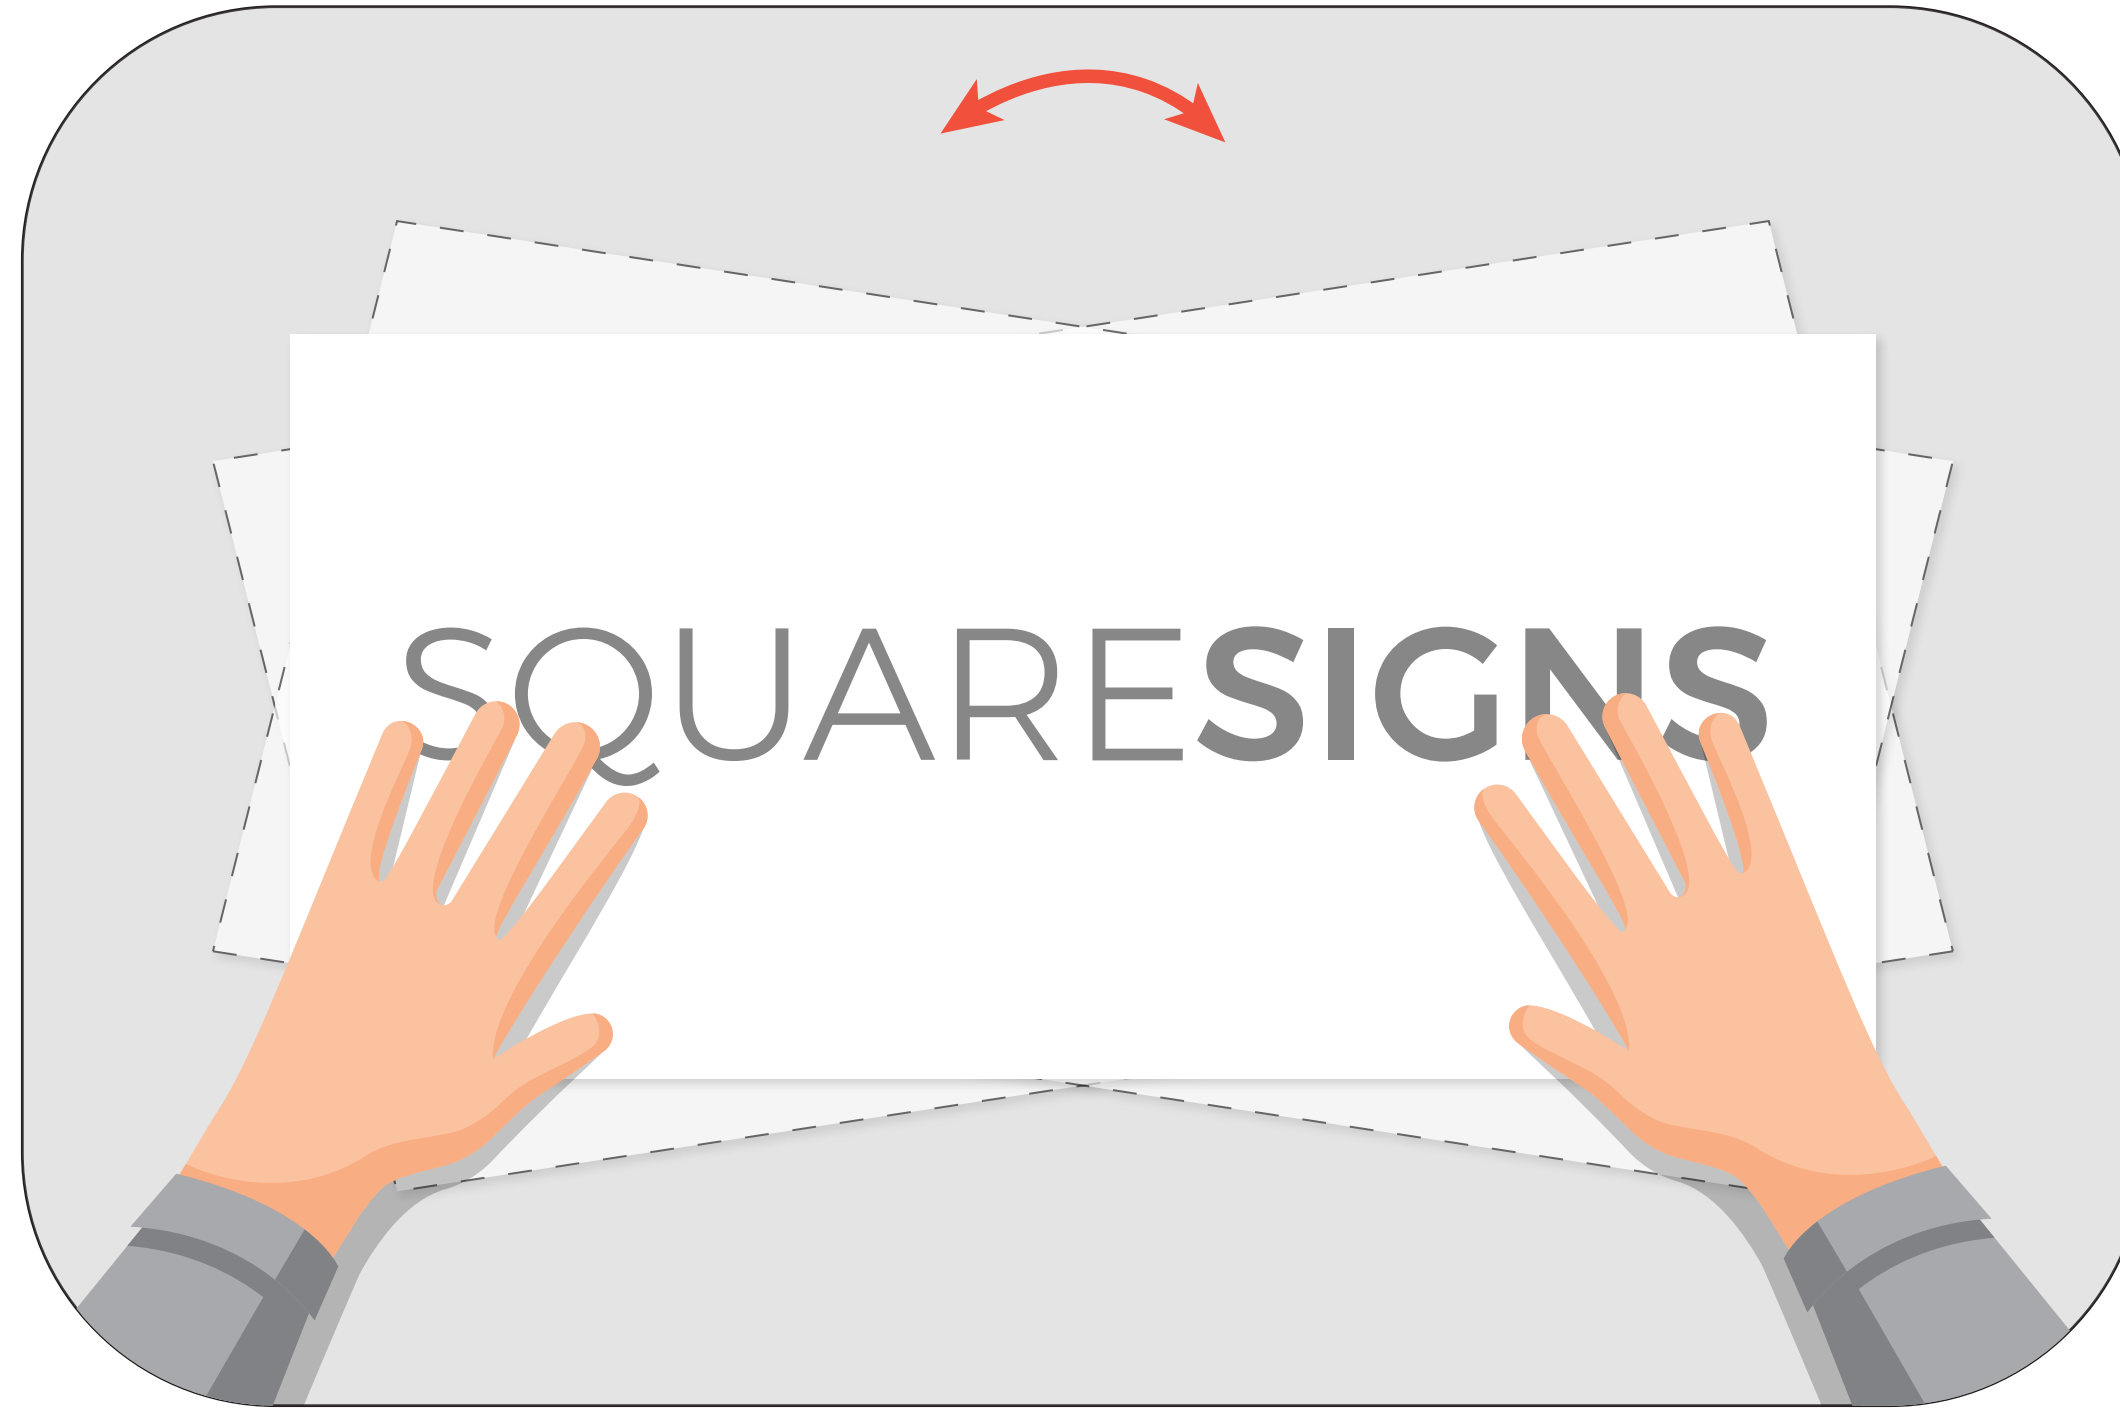

Step 2: Adjust the decal's position to ensure the lettering is level.




Step 3: Fix the lettering with tape at the top corners and top and bottom centers.

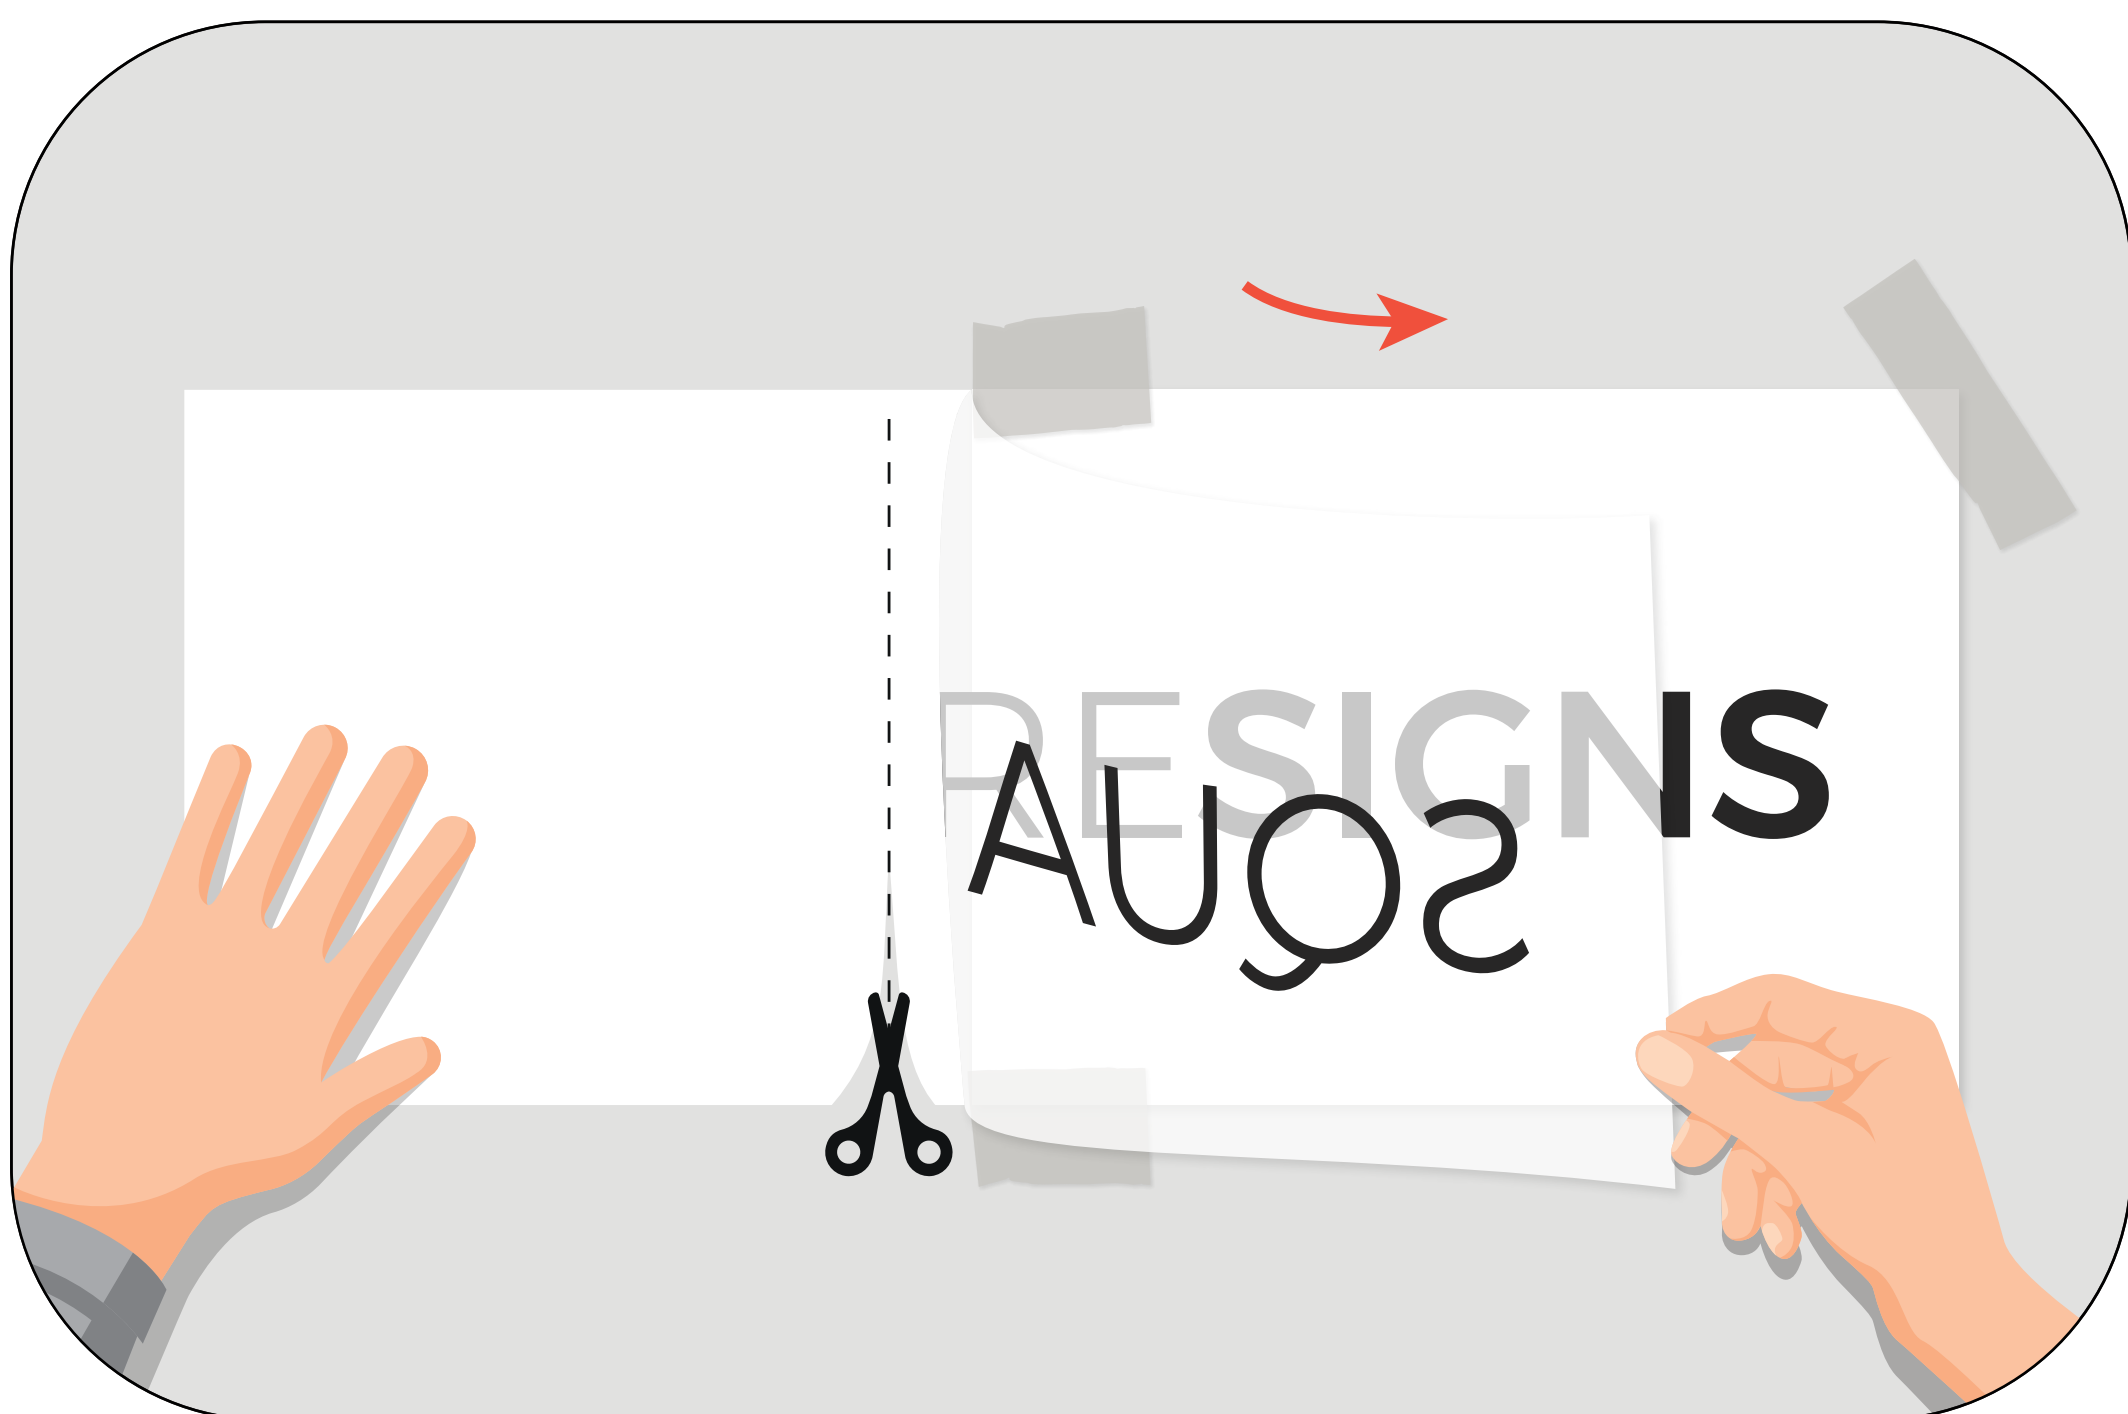

Step 4: Lift one side of the lettering, then peel and cut off the backing paper.



Step 5: Press the lettering onto the surface and smooth it with a squeegee.

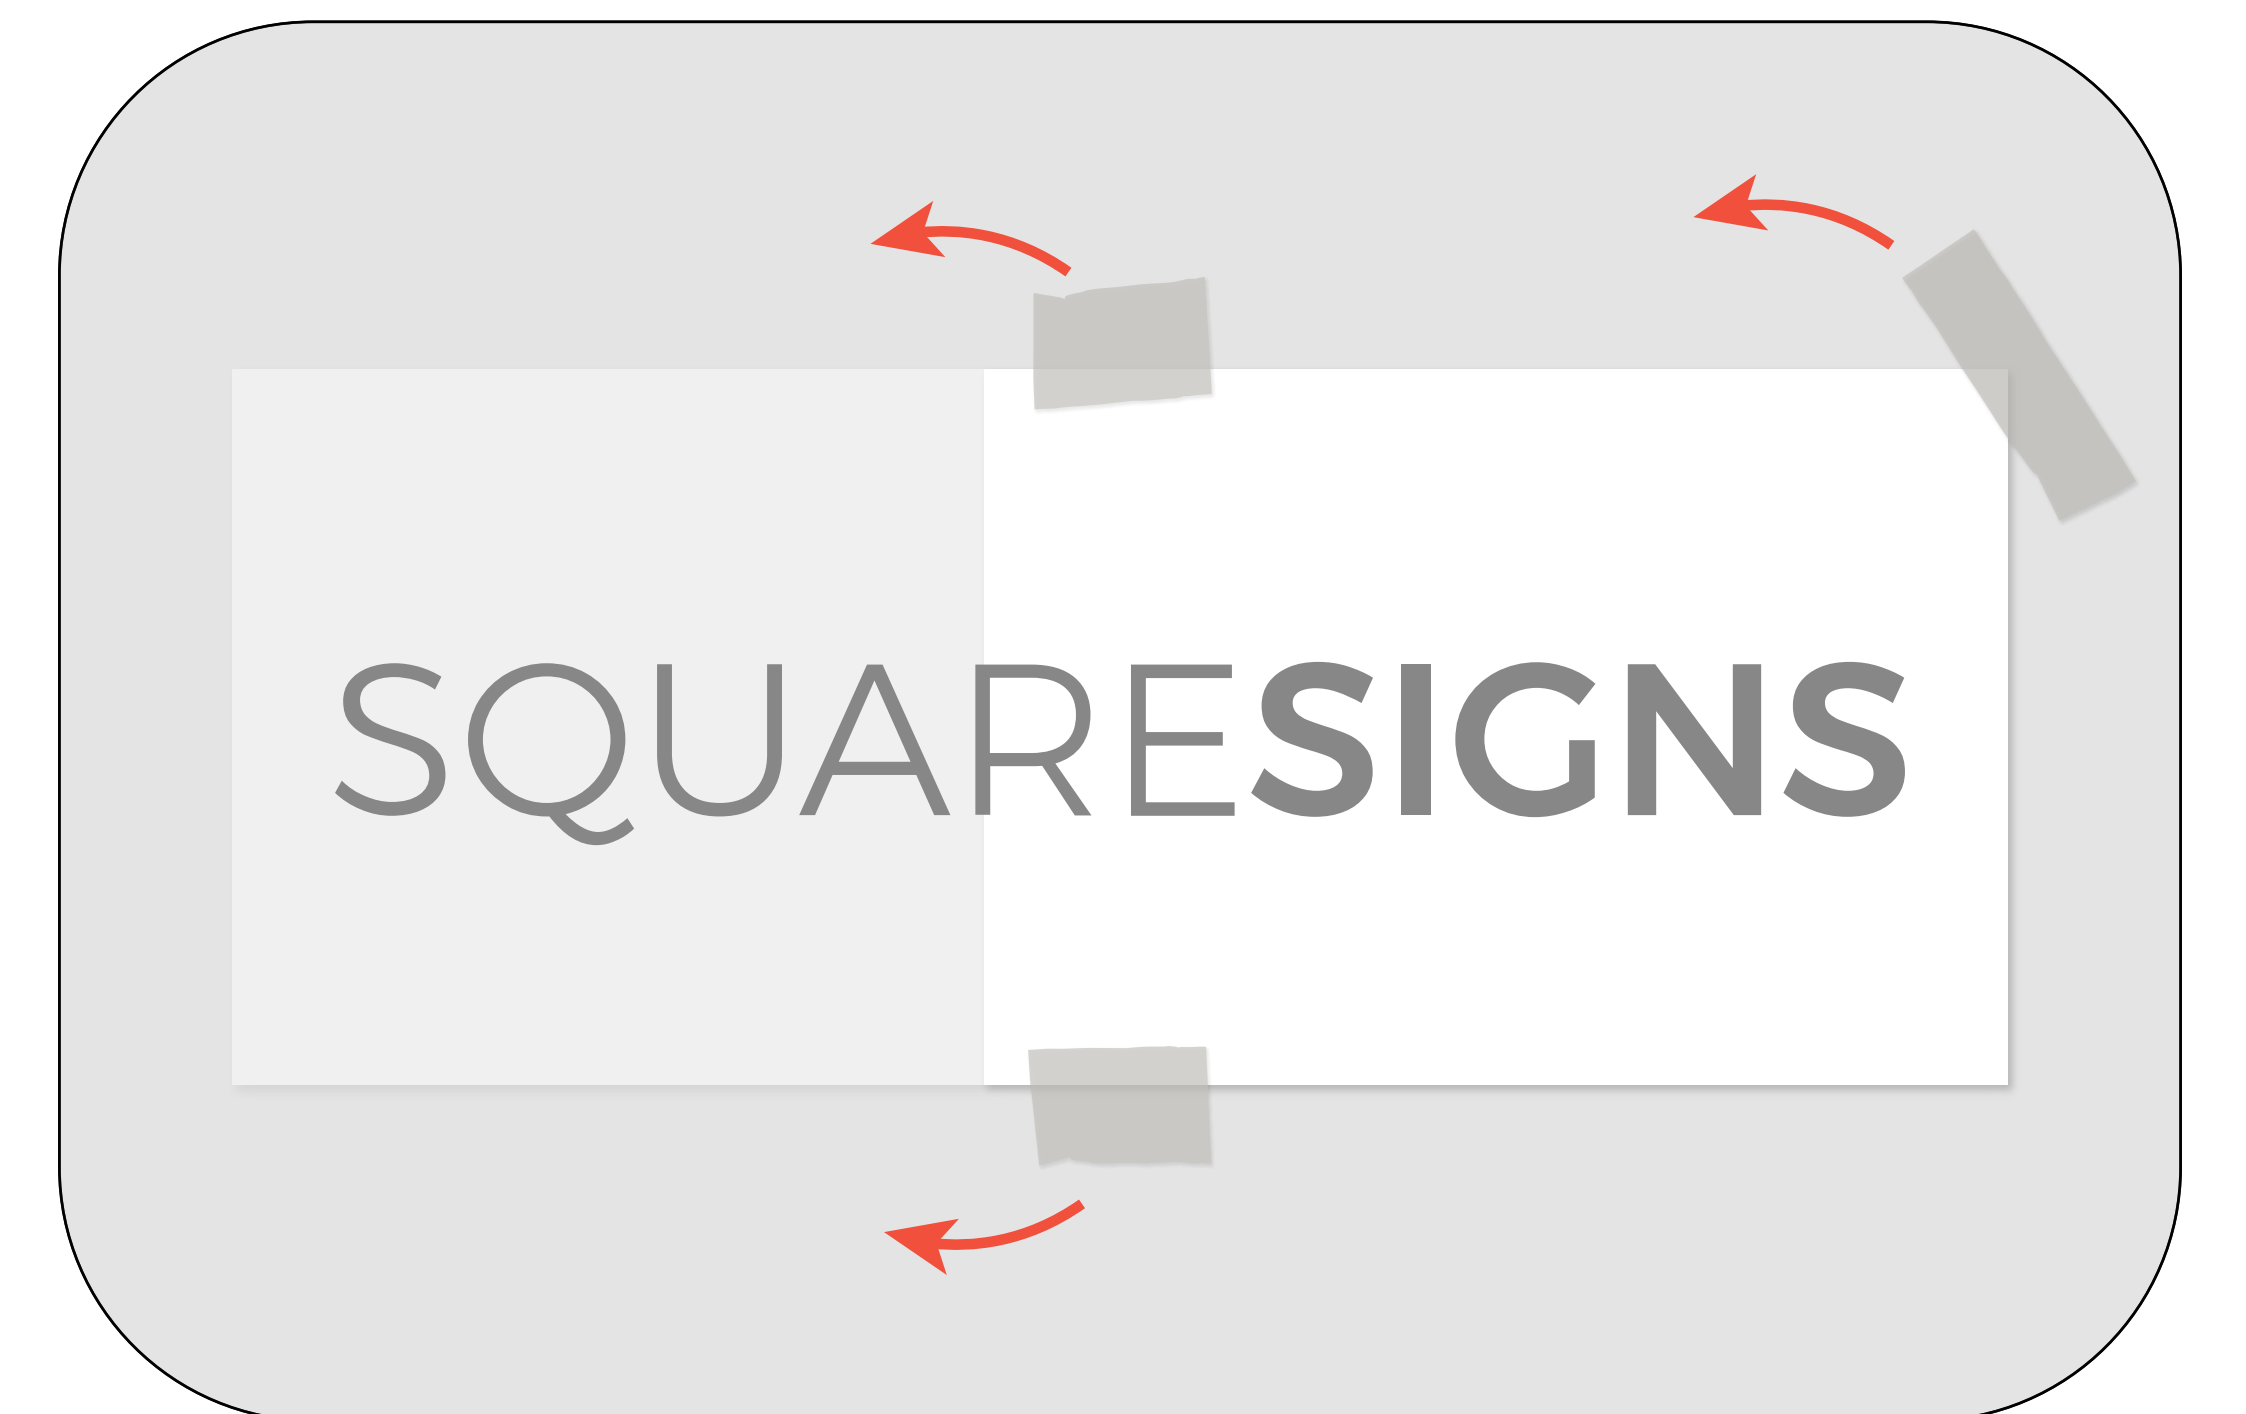

Step 6: Remove all the pieces of tape.



Step 7: Lift the unbound side of the lettering and peel off the backing paper.



Step 8: Press the product onto the surface and go over it with a squeegee.



Step 9: Remove the transfer paper.