


# Installation by Dry Mounting

\* Air and application surface temperature must be above 45°F and the humidity less than 90%.




**Step 1:** Clean the surface with a damp non-abrasive cloth.

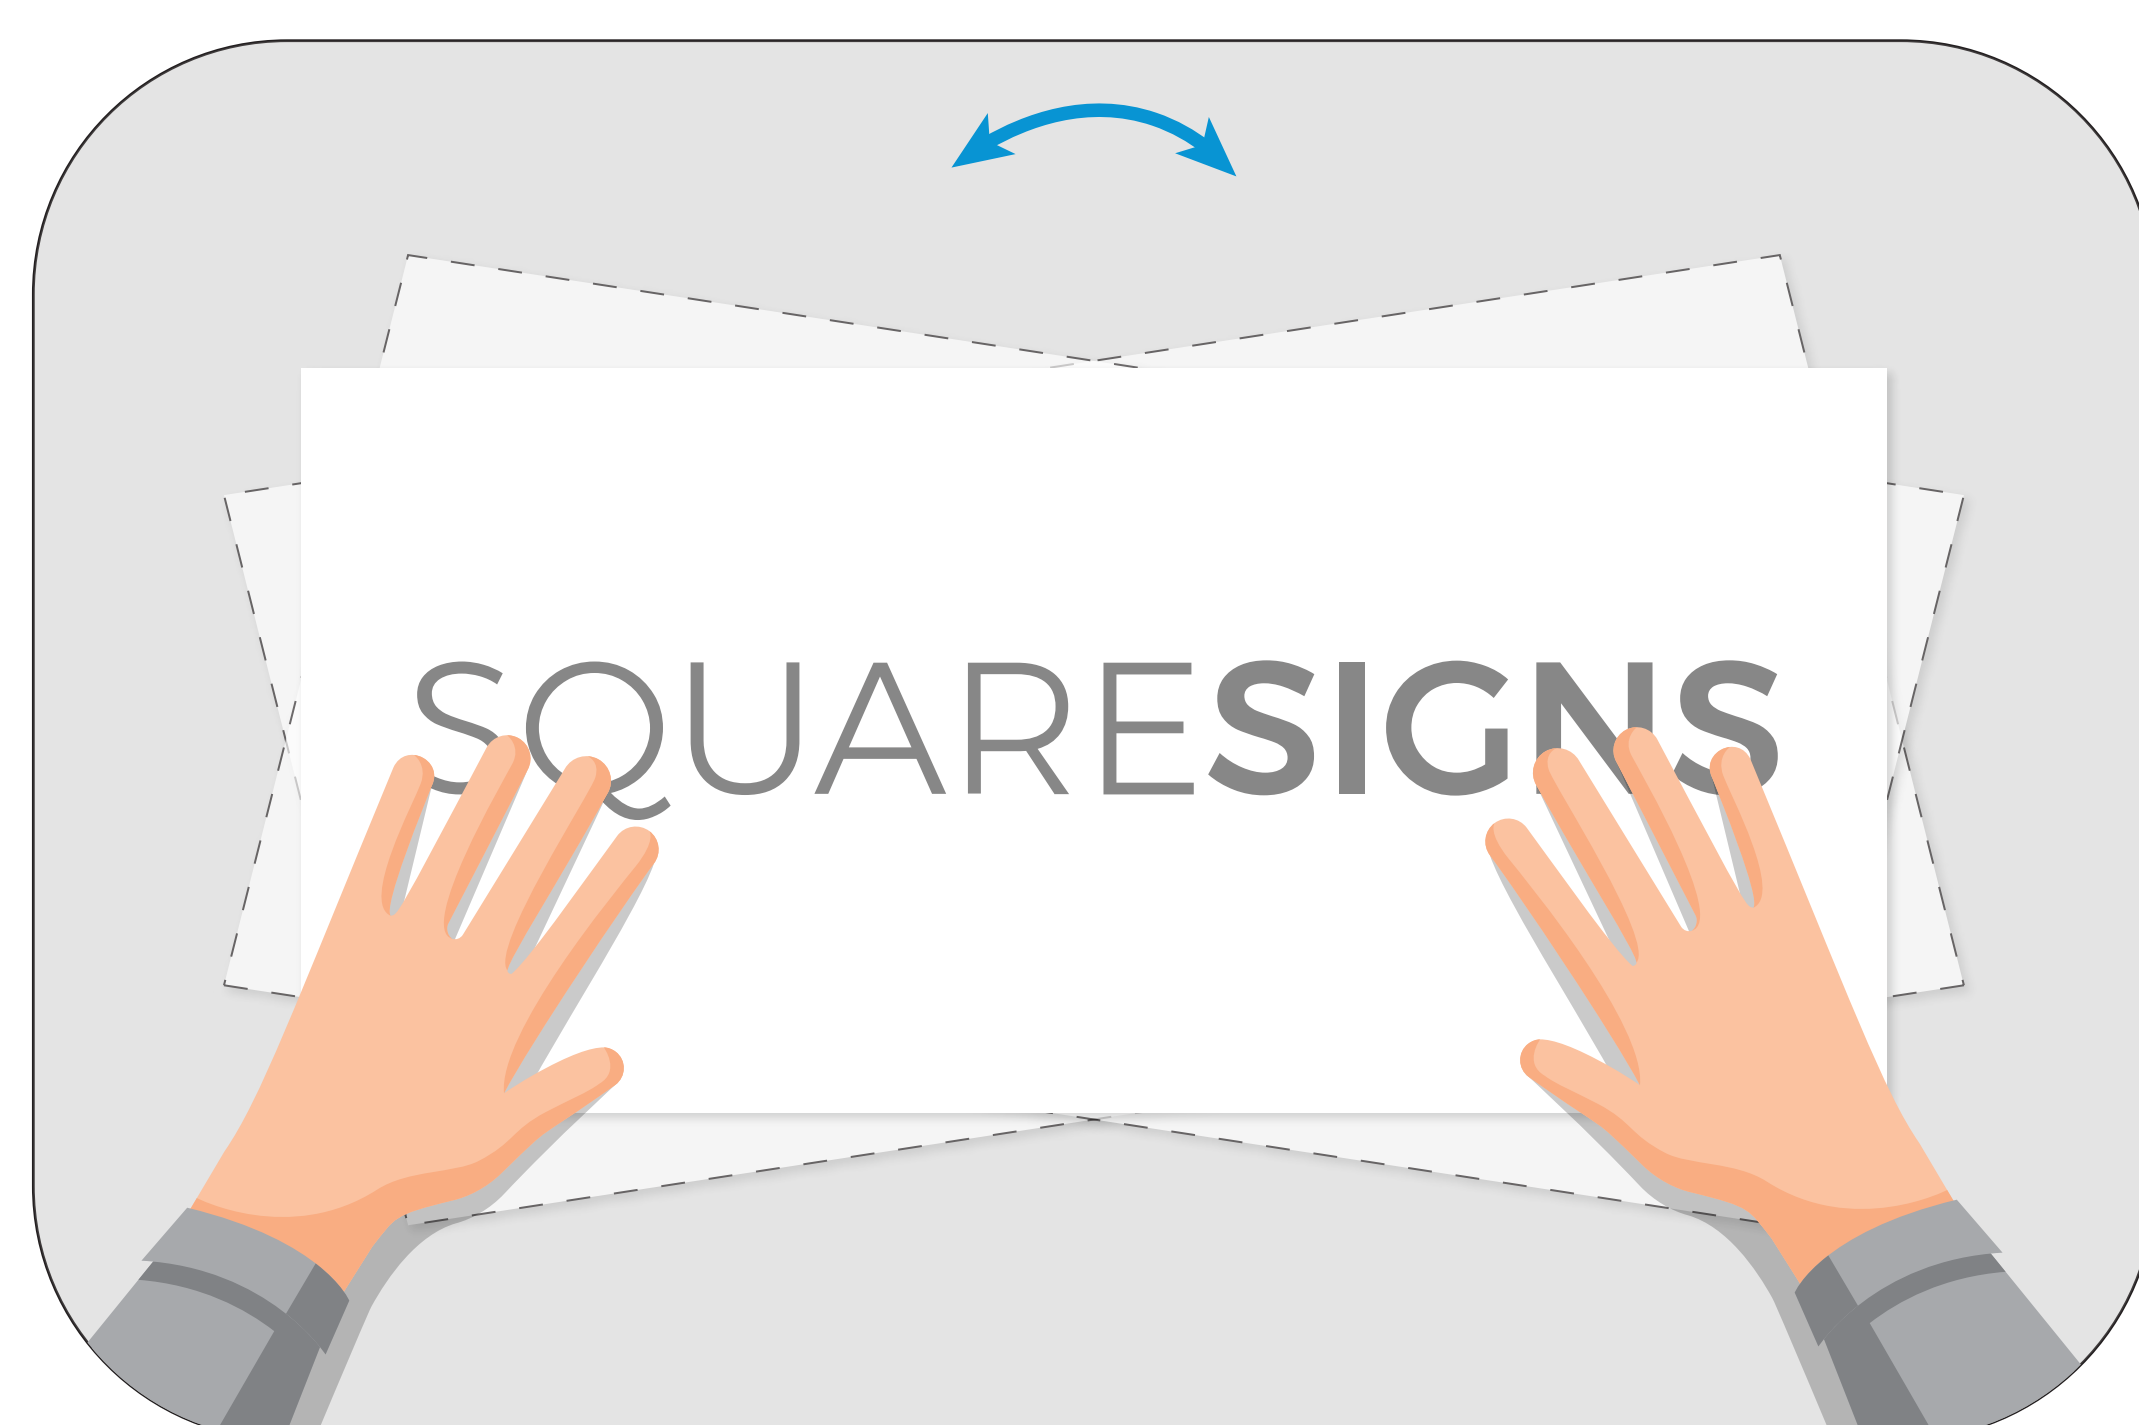

**Step 2:** Adjust the decal's position to ensure the lettering is level.




**Step 3:** Fix the lettering with tape at the top corners and top and bottom centers.

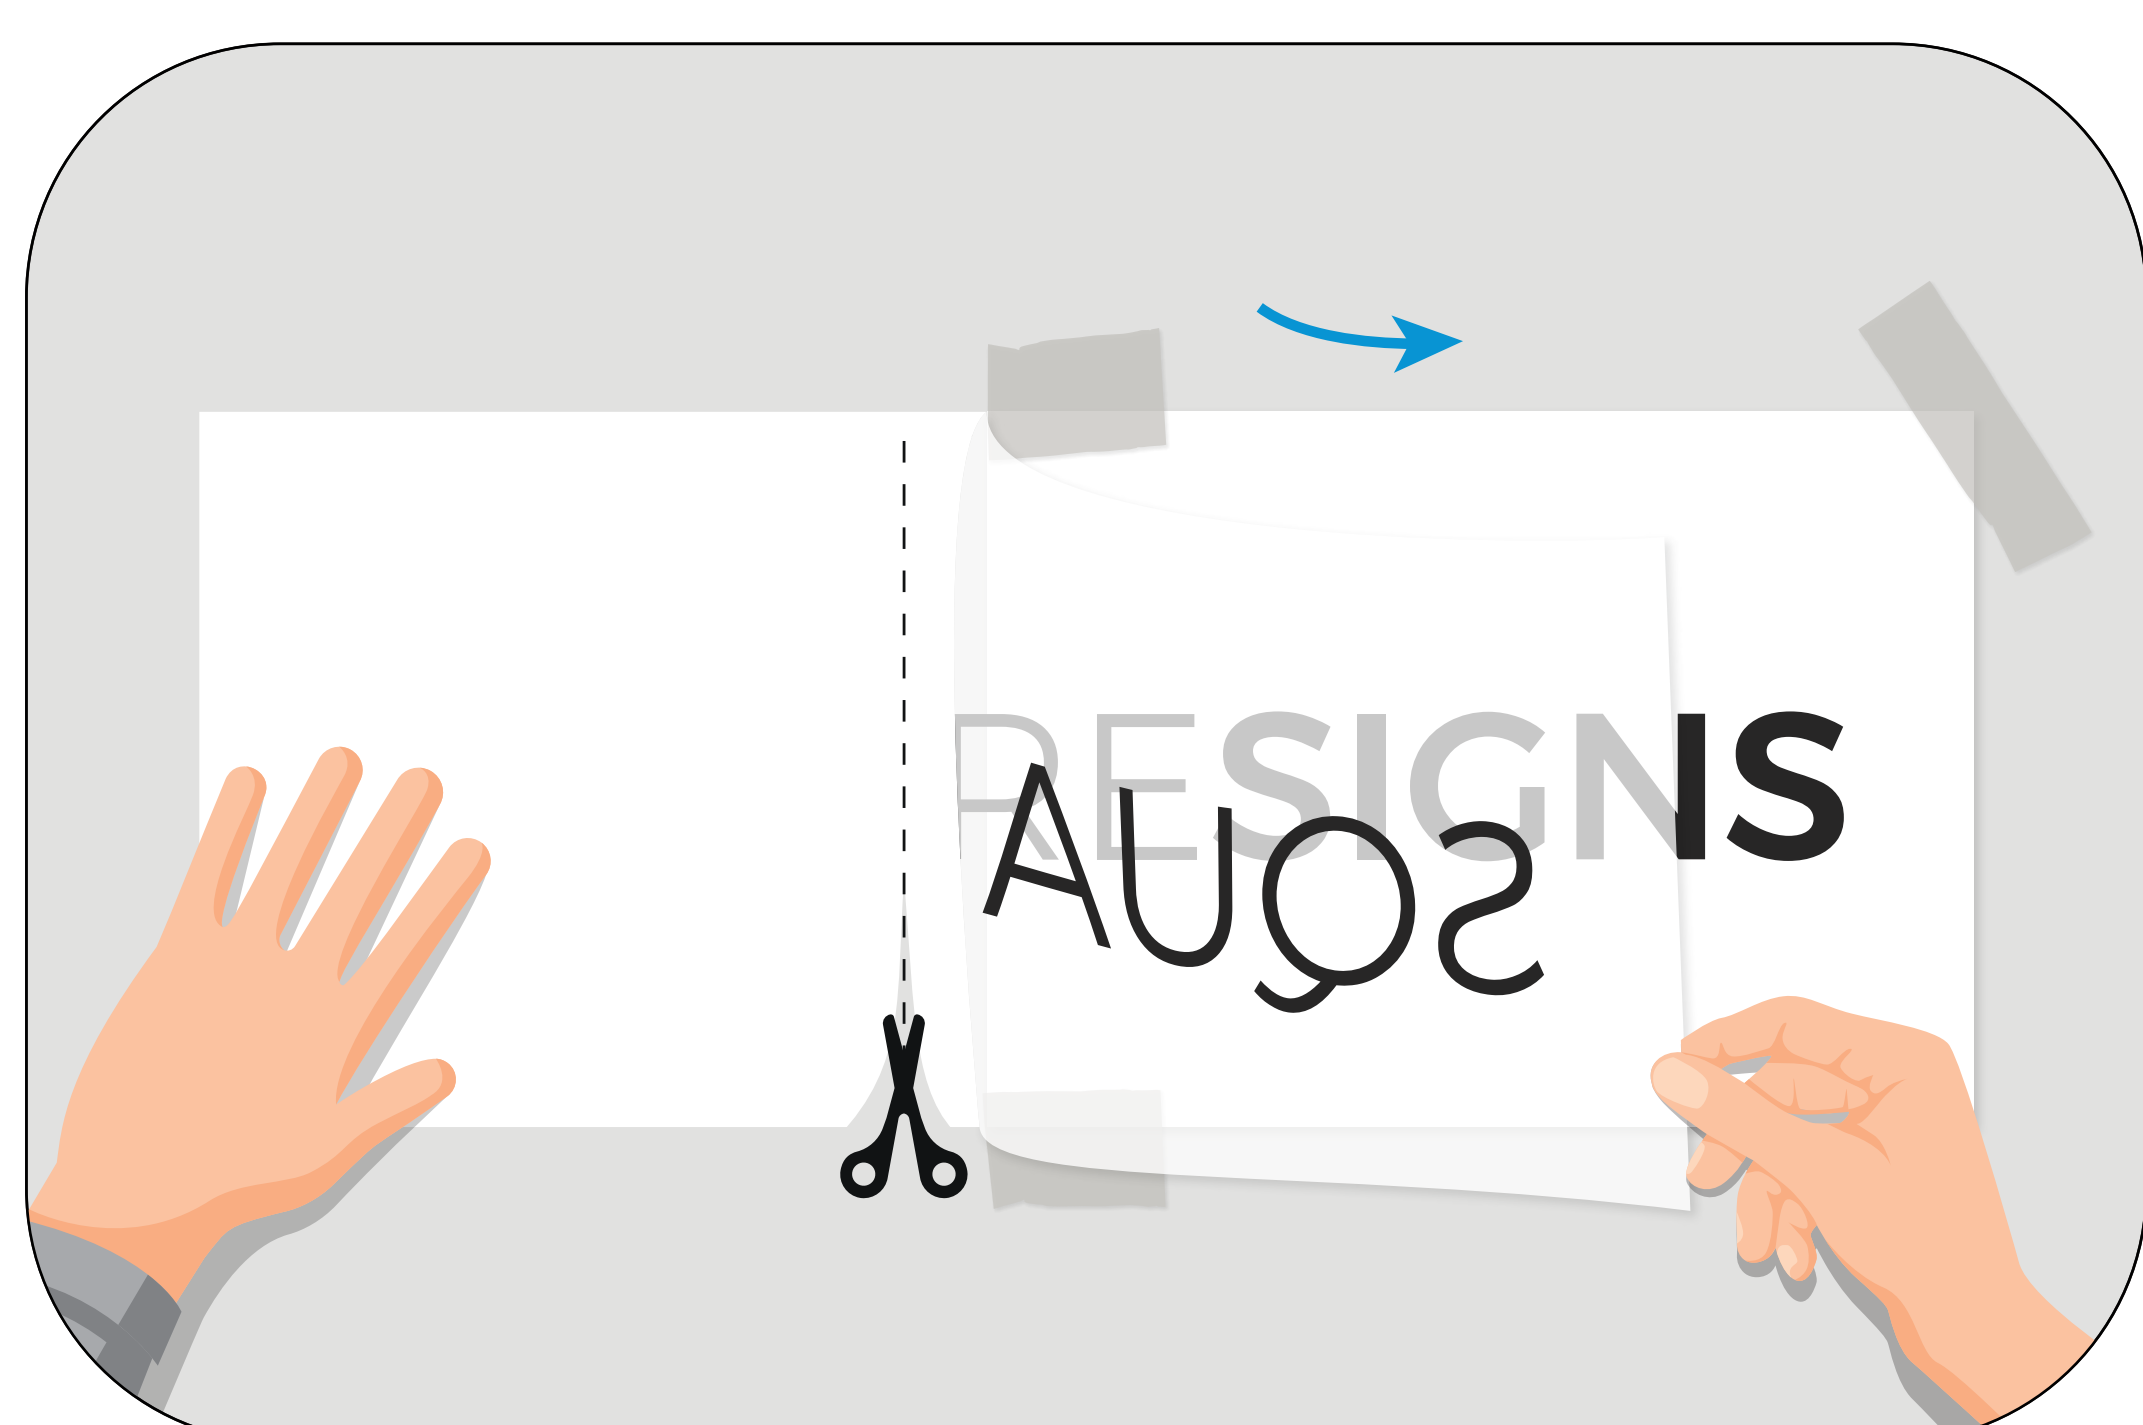


**Step 4:** Lift one side of the lettering, then peel and cut off the backing paper.



**Step 5:** Press the lettering onto the surface and smooth it with a squeegee.

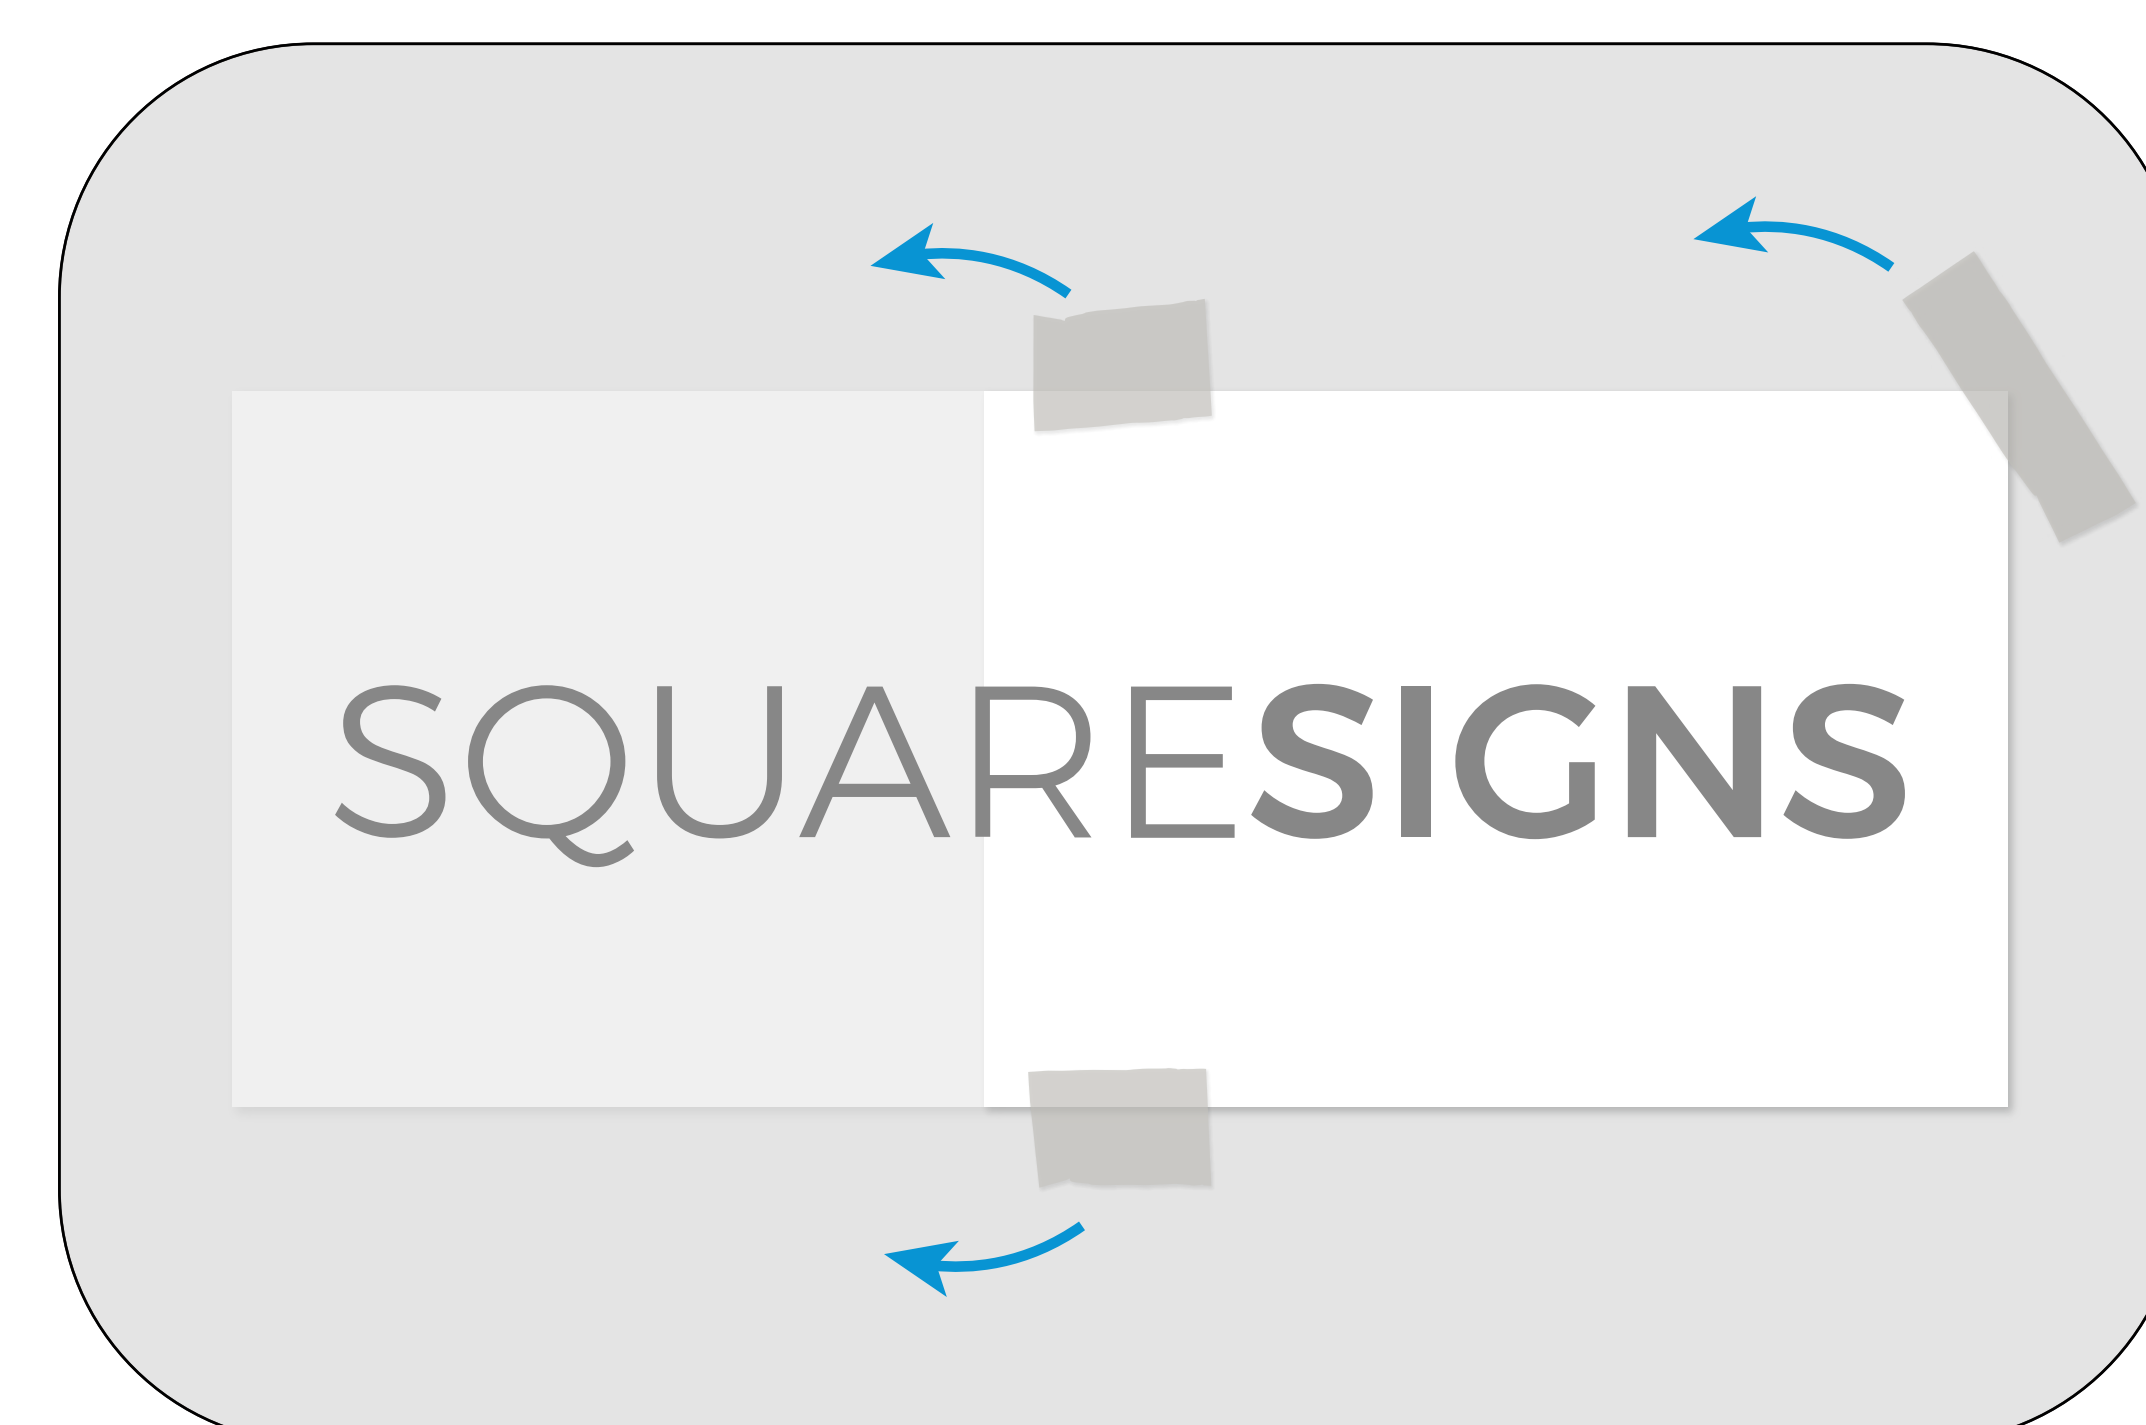


**Step 6:** Remove all the pieces of tape.

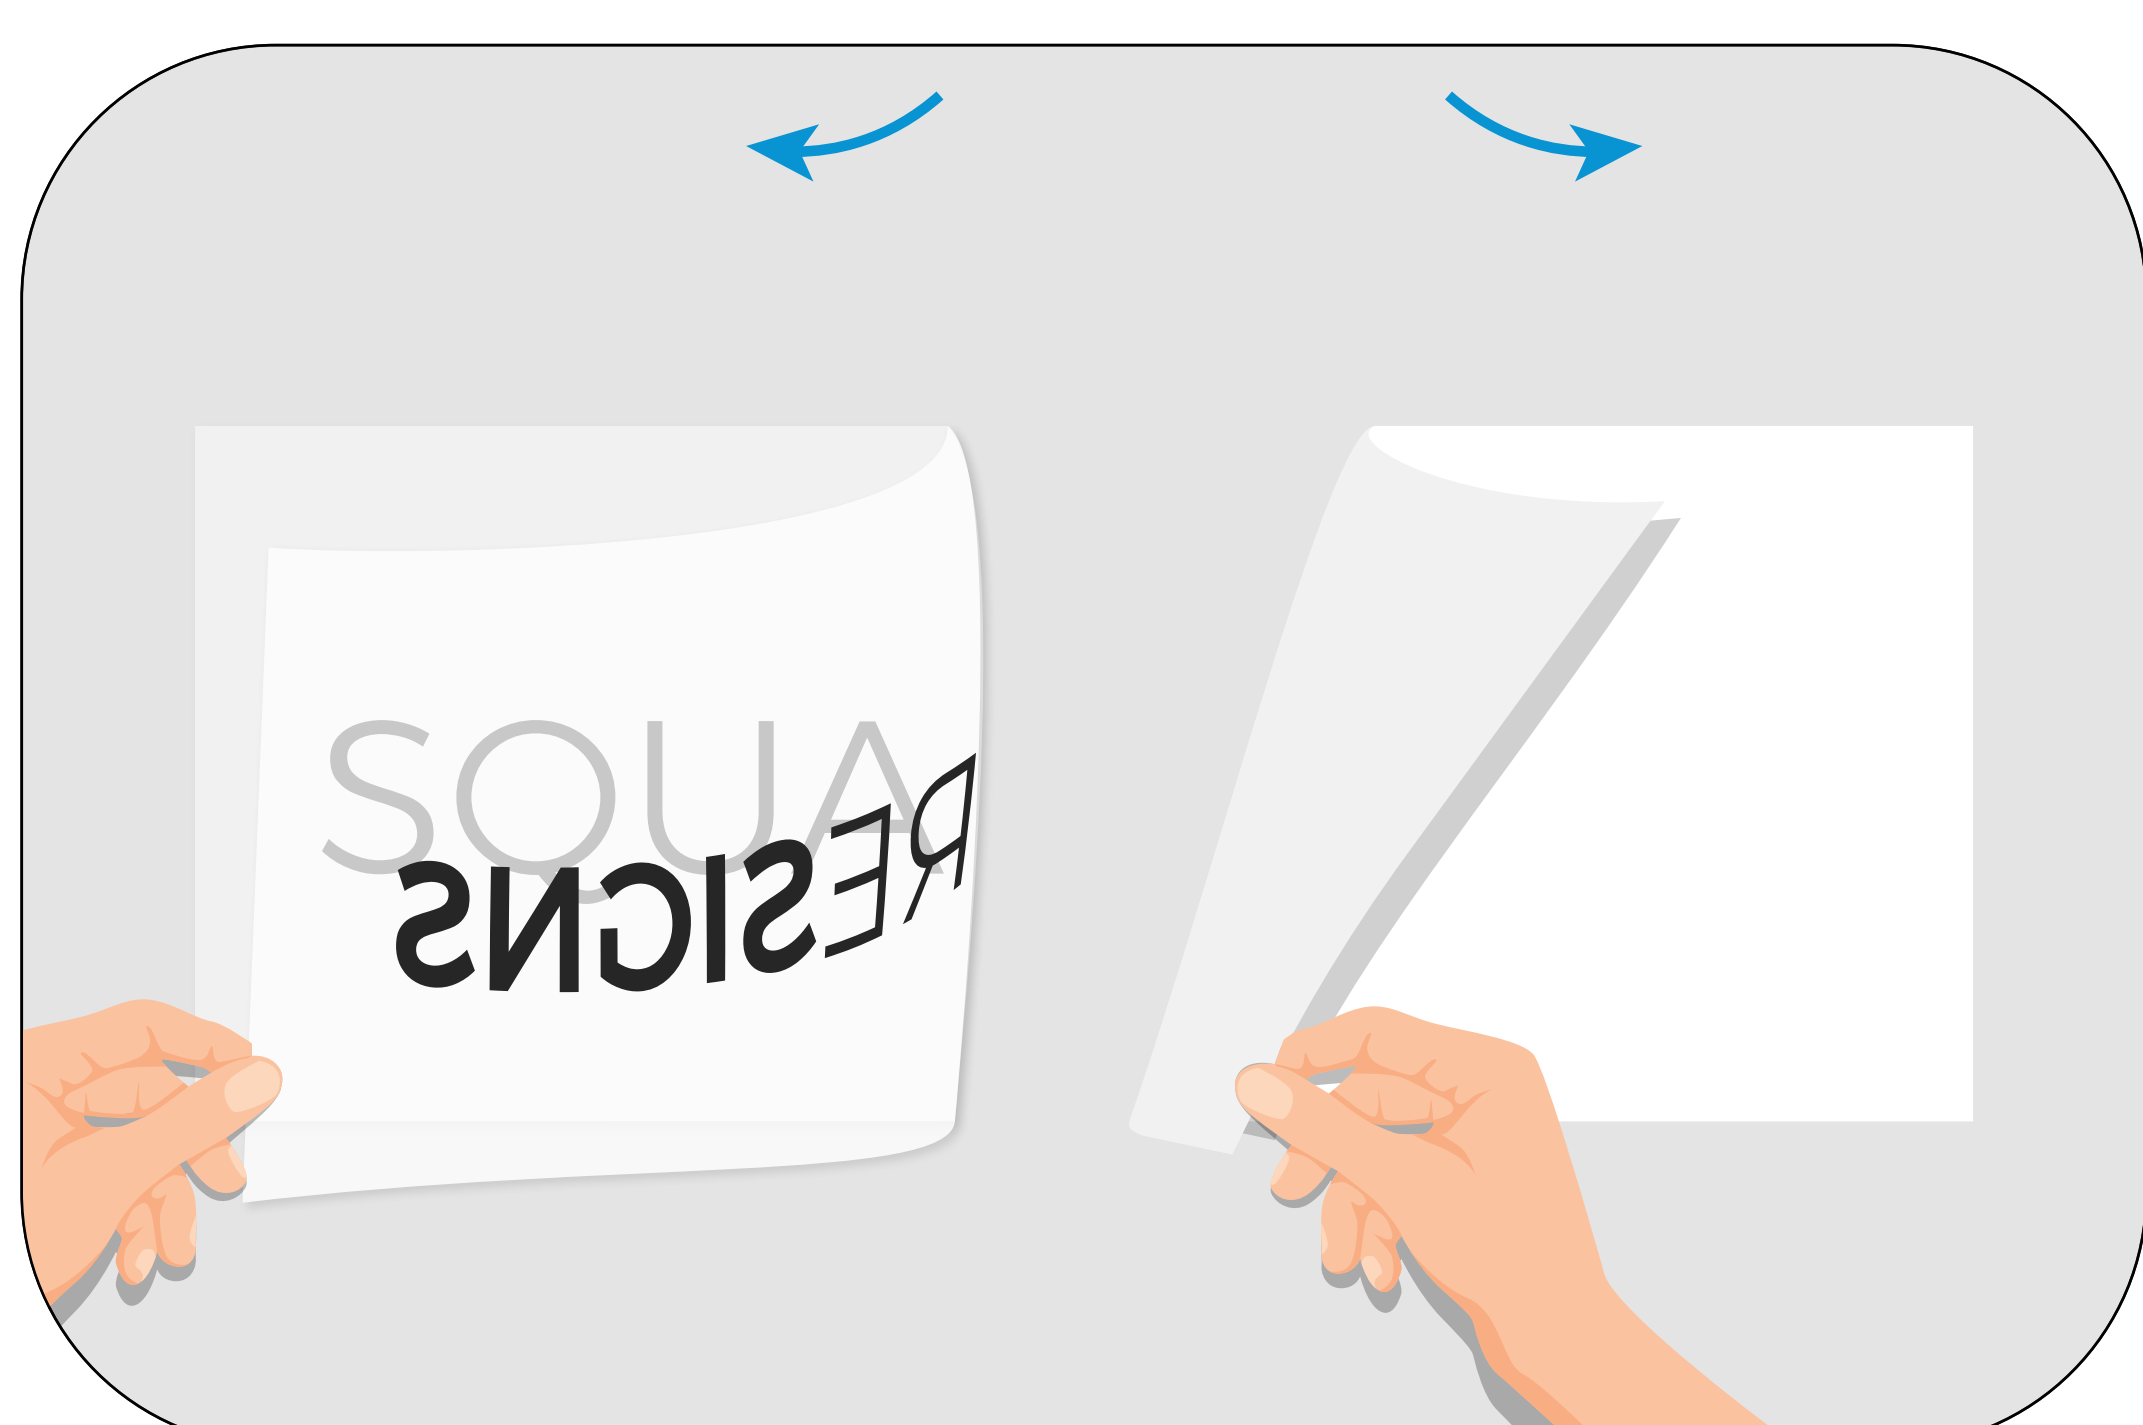

**Step 7:** Lift the unbound side of the lettering and peel off the backing paper.



**Step 8:** Press the product onto the surface and go over it with a squeegee.

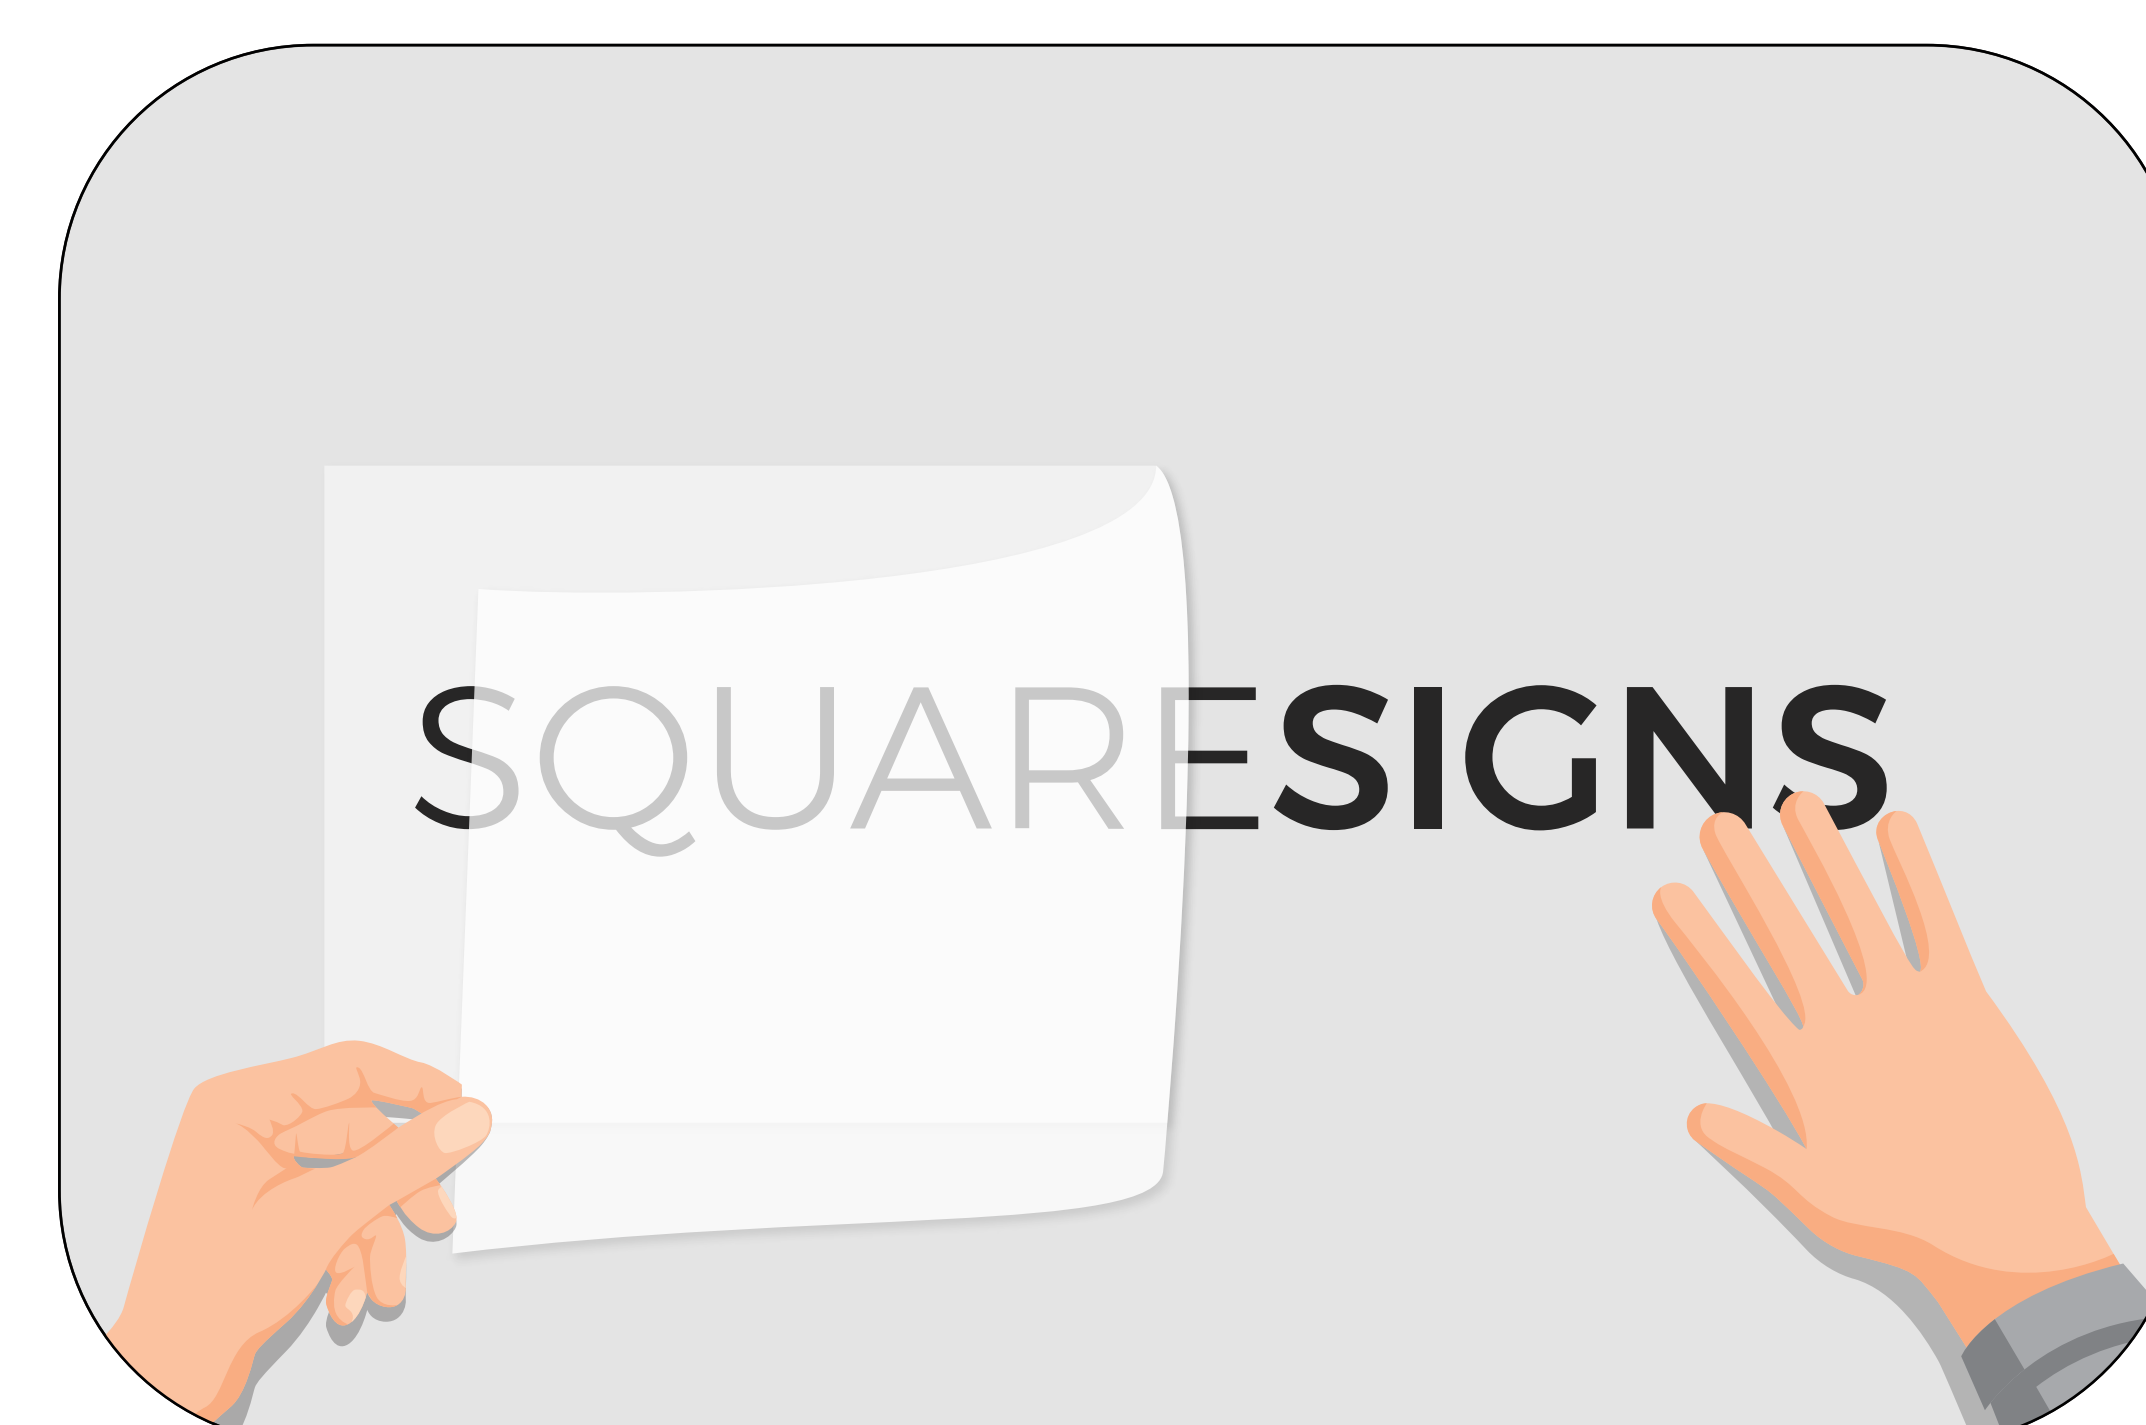

**Step 9:** Remove the transfer paper.